

How to change IP address of Viewpro gimbal?

Use the serial port(same serial port for controlling the gimbal):

Hex, 48bytes,

Frame head: 7e 7e 44 00 00 87, IP address is : 4 bytes follow head

Last byte is checksum byte = sum of all bytes MOD 256.

Restart the gimbal after change the IP to validate the new IP address.

For example:

• IP: 192.168.0.2

• IP:192.168.0.3

• IP:192.168.1.160