

Single Sensor IP Gimbal Software Connection


1. PC end IP Settings

The IP address of camera is: 192.168.1.160, set PC end and IP to a same network segment

Eg: PC end: IP address: 192.168.1.80

Subnet mask: 255.255.255.0

Default gateway: 192.168.1.1

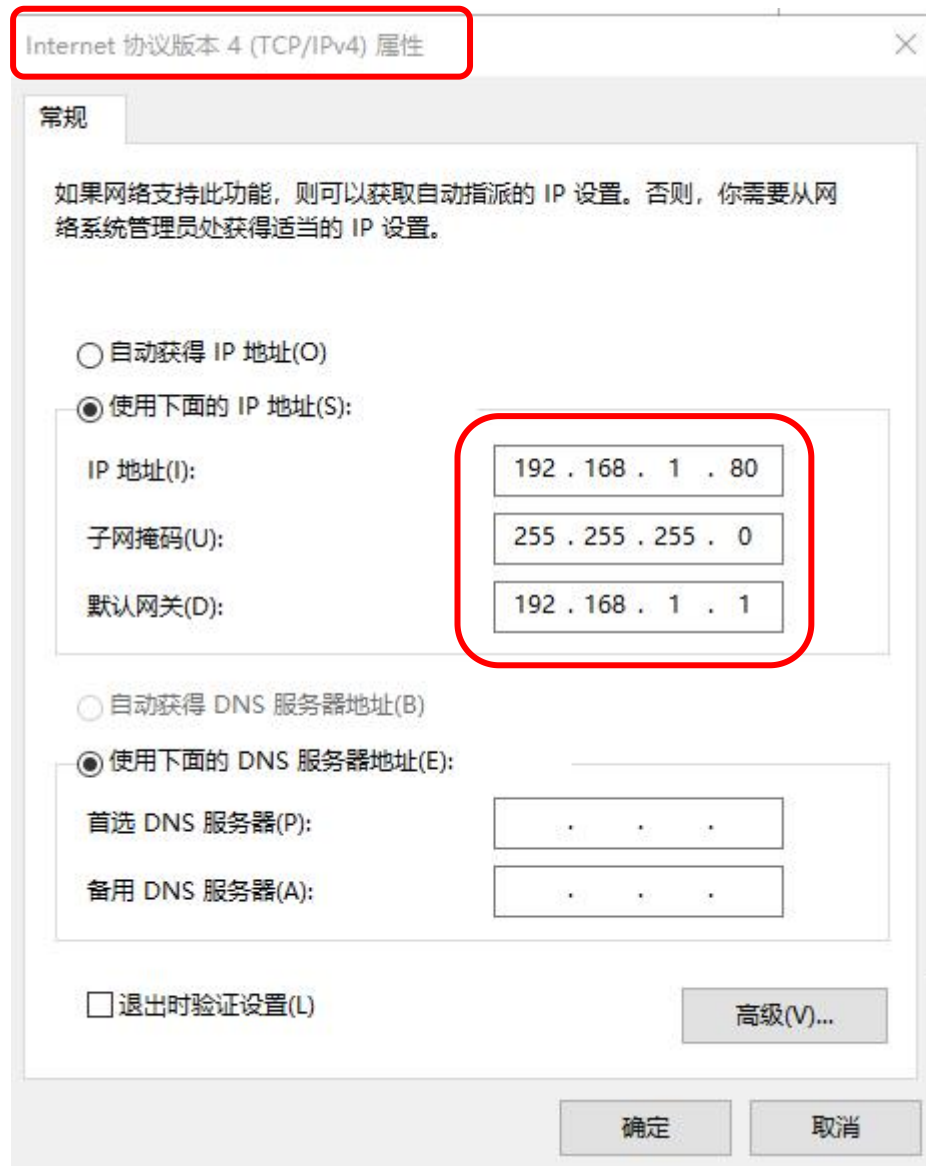

Internet 协议版本 4 (TCP/IPv4) 属性

常规

如果网络支持此功能，则可以获取自动指派的 IP 设置。否则，你需要从网络系统管理员处获得适当的 IP 设置。

自动获得 IP 地址(O)

使用下面的 IP 地址(S):

IP 地址(I): 192 . 168 . 1 . 80

子网掩码(U): 255 . 255 . 255 . 0

默认网关(D): 192 . 168 . 1 . 1

自动获得 DNS 服务器地址(B)

使用下面的 DNS 服务器地址(E):

首选 DNS 服务器(P): . . .

备用 DNS 服务器(A): . . .


退出时验证设置(L)

高级(V)...

确定 取消

2. Video Surveillance Client Setting

- 1) Install Software "Video Surveillance Client", start it
- 2) Click "Device", press "Search", the camera information will be showed in the Device search list, click the box to choose it, then press "Add" to add it to display.

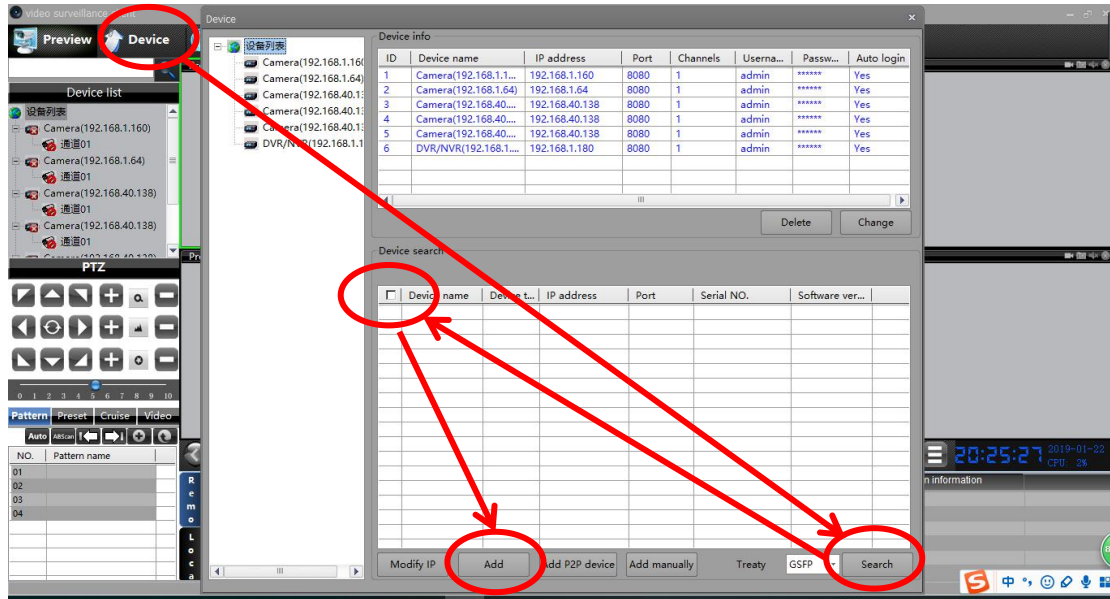

- 3) The camera image will be displayed in one window automatically after device added successfully.
- 4) You can also control the gimbal in the PTZ interface and control zoom, record and photo from the software.

